

No.3 フロアコンセント.花道コンセント

<FC後>

206	205	204	203	202	201	DMX
6	5	4	3	2	1	
[]	[]	[]	[]	[]	[]	

LH下

197	198	199	200
(#72) 1	(#59) 2	(#22) 3	(#40) 4
[]	[]	[]	[]

LH上

178	177	176	175
(#40) 4	(#22) 3	(#59) 2	(#72) 1
[]	[]	[]	[]

FC盆

4	3	2	1
[]	[]	[]	[]

174	173
18	17
[]	[]

<下手FC>

195	196
17	18
[]	[]

<FC前/オケピFC切り替え>

156	155	154	153	DMX
4	3	2	1	
[]	[]	[]	[]	

172	171
16	15
[]	[]

193	194
15	16
[]	[]

170	169	168	167
14	13	12	11
[]	[]	[]	[]

189	190	191	192
11	12	13	14
[]	[]	[]	[]

166	165	164	163
10	9	8	7
[]	[]	[]	[]

185	186	187	188
7	8	9	10
[]	[]	[]	[]

<舞台F/迫りFC切り替え>

152	151	150	149	DMX
4	3	2	1	
[]	[]	[]	[]	

162	161	160	159
6	5	4	3
[]	[]	[]	[]

181	182	183	184
3	4	5	6
[]	[]	[]	[]

158	157
2	1
[]	[]

<下手FC>

179	180
1	2
[]	[]

<花Foot下>

214	215
1	2
[]	[]

<花Foot上>

 
 
 
 


212	211
2	1
[]	[]

<花FC下>


216
1
[]

<花FC上>




213
1
[]

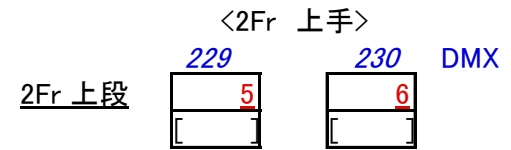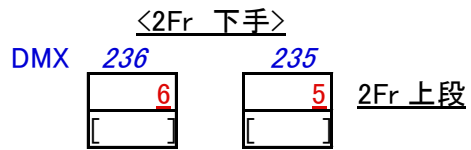

1Fr 下手

 

<1Fr 上手>

   

<CL>

